


# AUDI TT 8N

Blue connector					
Terminal 15. Ignition ON Клемма 15. зажигание ВКЛ	37	1	17	Main beams Дальний свет	
Brake pad wear Колодки	24	2	18	Left turn signal Лев.поворот	
Speedometer output 1 Выход спидометра 1		3	19	---	
5 V supply		4	20	Terminal 58s Освещение приб. (58b)	
Fuel gauge sender Датчик уровня топлива		5	21	4	Driver's door contact Водительская дверь
Tank warning OBD 2		6	22	5	Coolant level low Низкий уровень ОЖ
Terminal 31 (sender earth) Клемма 31 (земля выход)		7	23	DC IN+	Terminal 30, +12v Battery Терминал 30, +12v постоянн
Coolant temperature Температура ОЖ		8	24	DC IN-	Terminal 31 (load GND) Клемма 31 земля GND
Terminal 31 (load GND) Клемма 31 земля GND	38	9	25		Consumption signal
Oil pressure switch Реле давления масла		10	26		Right parking light Правый стояночный свет
Engine speed signal		11	27		Left parking light Левый стояночный свет
Air conditioner shutoff		12	28		Speedometer input Вход спидометра
Adaptive suspension		13	29	35	Low brake fluid Низкий ур. торм. жидкости
Rear fog light Задний ПТФ	18	14	30	27	s86 Terminal s86 контакт
Terminal 58d		15	31		Speedometer output 2
Trailer turn signal		16	32		ESP/TCS

### GENERAL SCHEME 7.8.2-7.8.3

MFD	Dash	
1		3.3 V
2*	15	Grey Washer fluid level
3	14	Grey Brake light
4	21	Blue Driver's door
5	22	Blue Low coolant
6*	USB	White
7*	USB	Green
8		
9		CAN RX ( )
10	19	Green CAN L (motor)
11	18	Green CAN H (motor)
12		Rx CAN comfort
13	23	Green CAN L (convenience)
14	22	Green CAN H (convenience)
13*	6	Grey CAN bus Low (display)
14*	5	Grey CAN bus High (display)
15		5V
16*	31	Grey REVERSING LIGHT SWITCH
17		minus (-) LED High beam
18	14	Blue Convertible roof
19		
20	30	Grey TurboTimer

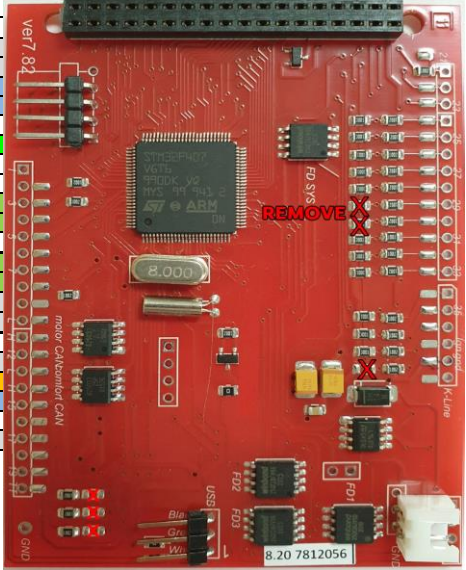

MFD	Dash	
21	17	Grey Down
22	18	Grey Up
23	19	Grey Reset
24	2	Blue Brake Pads
25	32	Grey BOOST
26	25	Green HOOD F120
27	30	Blue TurboTimer
28	32	Green Headlight range control
29	6	Green Luggage door switch (diode)
30	15	Green Oil SensorG266
31	13	Green Hand brake
32	12	Green Baterie (61)
33*	21	Green ABS
34	27	Green Belts
35	29	Blue Brake Liquid
36	16	Grey Lamp Fault
37	1	Blue ignition
38	9	Blue GND
39	28	Green K-line
40		DC-DC OUT+ SB +
41		DC-DC OUT- GND

2\* If you install 3dMFD in the halfFIS cluster, connect 2 pin MFD to minus (-) LED Windscreen washer fluid level sensor - G33-

6\* If you inserted the USB wires into the connector at the bottom of the 3dMFD PCD, these pins are not used ..  
Если вы вставили провода USB в разъем в нижней части платы 3dMFD, эти контакты не используются ...

7\* If you inserted the USB wires into the connector at the bottom of the 3dMFD PCD, these pins are not used ..  
Если вы вставили провода USB в разъем в нижней части ПКД 3dMFD, эти контакты не используются ...

13 Connect if you have NOT RNS-E stereo


14

13\* Connect if you have RNS-E stereo

14\*

16\* If you have add a wire of engaging reverse gear to cluster. Manual gear box  
Если вы добавили в кластер провод включения задней передачи. Для механической КПП

33\* If you have an optional Oil pressure sensor / EGR sensor  
Если у вас есть опциональный датчик давления масла / датчик EGR

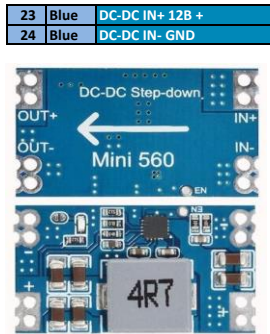

Grey connector				
1	Menu control switch (menu)	21	17	On-board computer, left
2	Menu control switch (out A)	22	18	On-board computer, right
3	Menu control switch (out B)	23	19	On-board computer reset
4	Menu control switch (enter)		20	Auxiliary heater radio remote control
5	CAN bus High (display)	14*	21	Summer /winter switching
6	CAN bus Low (display)	13*	22	Auxiliary heater on
7	Not used		23	Control group 1 Navigation
8	Not used		24	Control group 2 Navigation
9	Not used		25	Control group Telematics
10	Not used		26	Not used
11	Enable		27	Not used
12	Clock		28	Not used
13	Data		29	Not used
14	Brake light	3	20	TurboTimer
15	Washer fluid level	2*	16*	F14 - REVERSING LIGHT SWITCH
16	Tail light/dipped beam (bulb of	36	24	32 BOOST

Green connector				
1	Not used		17	Transponder 2
2	Transponder	11	18	CAN bus High (motor)
3	External photosensor	10	19	CAN bus Low (motor)
4	Not used		20	Not used
5	W-wire	33*	21	ABS
6	Central locking signal	29	22	CAN bus High (convenience)
7	Right turn signal		23	CAN bus Low (convenience)
8	External buzzer		24	Not used
9	External gong	26	25	Bonnet / Hood / Kanor
10	Airbag		26	Filler neck compartment lid
11	Standing time output	34	27	Belt buckle
12	Terminal 61	32	41	28 K-wire
13	Parking brake	31	29	Ambient temperature input
14	CHECK		30	Terminal 58de
15	Oil level/oil temperature	30	31	Selector lever position display
16	Oil filter pressure		28	32 Headlight range control

1999				
1	Not used		17	Transponder 2
2	Transponder 1		18	Not used
3	Not used		19	Not used
4	Not used		20	Not used
5	W-wire		21	Not used
6	Tailgate/boot lid (midline version only)		22	Not used
7	Brake pad (not used at		23	Not used
8	nput for external buzzer actuation (not used at		24	Not used
9	nput for external gong actuation (not used at		25	Not used
10	Tank warning output signal for engine contr		26	Not used
11	Standing time output		27	Not used
12	Air conditioner shutoff		28	Not used
13	Parking brake		29	Terminal 58d (external dimmer pc
14	Electronic throttle		30	Speedometer output 2
15	Side light		31	Not used
16	Not used		32	Not used

1999				
Gre	From pin №		Ha/ To pin №	
7	коричнево-зеленый / brown green		-> 2 blue connector	
10	пустой / empty		-> 6 blue connector	
12	голубой синий / blue dark blue		-> 12 blue connector	
29	->		-> 30 green connector	
21	->		-> 15 green connector	
15			remove	

Blu	From pin №		Green Ha/ To pin №	
2	черно-зеленый / black green		-> 7	
6	Yellow white		-> 10	
12	голубой/ blue		-> 12	
19	orange red		-> 21	
25	Green blue		-> 28	